


# Electrical amplifier for controlling DC motor-actuated pressure control valves with electrical feedback

RE 30405/04.08

1/6

## Type VT-VRM1-1

Component series 1X

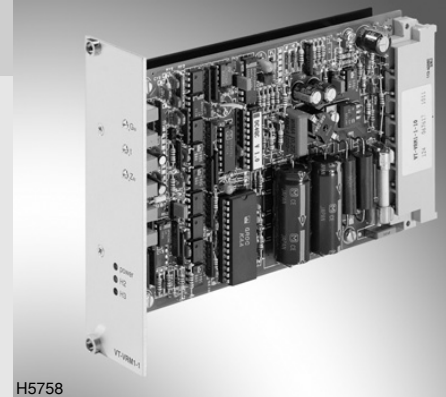

H5758

## Table of contents

Content	Page
Features	1
Ordering code	2
Technical data	2
Block circuit diagram	4
Electrical connection	5
Installation and connection	5

## Features

- The amplifier card is used for controlling DC motor-actuated pressure control valves with electrical feedback (DBGx...1X, DRG...1X).
- PWM output stage with 4-quadrant operation
  - Rotary angle controller of actual value potentiometer
  - Differential input for command value provision
  - Enable circuit
  - Command value inversion
  - DC/DC converter
  - Offset adjustment for command value
  - Command value attenuation
  - Ramp generator
  - LED indicator lamps:
    - power
    - H2 for maximum current indication
    - H3 for fault and missing enable

Information on available spare parts:  
[www.boschrexroth.com/spc](http://www.boschrexroth.com/spc)

## Ordering code

### Type VT-VRM1-1-1X

Material number: R900067617

#### Accessories (can be ordered separately)

##### Card holder:

– VT 3002-1-2X/15H, Material number: R900209648

##### Power supply unit:

– VT-NE30-2X, Material number: R901082348

## Technical data (for applications outside these parameters, please consult us!)

Operating voltage	$U_B$	24 VDC –20 % +40 % Residual ripple content: 8 %
Current consumption	$I$ (idle) $I_{max}$	0.2 A 6 A
Inputs		
Command value	$U$	0 V to +10 V ( $R_i > 100 \text{ k}\Omega$ )
Actual value	$U$	0 V to +15 V
Enable	$U$	log 0: 0 to 3 V log 1: 10 to 30 V
Invert (command value inversion)	$U$	log 0: 0 to 3 V log 1: 10 to 30 V
Adjustment ranges		
Offset adjustment for command value		0 to 50 %
Command value attenuation		20 to 100 %
Ramp time	$t$	40 ms to 1.6 s
Note: Valve can be overcontrolled. Before adjusting the offset, turn the command value attenuator to minimum and apply a command value of 0 V!		
Outputs		
Motor connection		
– Maximum output current	$I_{max}$	8 A
– Minimum motor inductivity	$L_{min}$	1 mH
Auxiliary voltage for potentiometer connection	$U$	15 V, 30 mA
Type of connection		15-pin male connector, DIN 41615, form H
Card dimensions		Euro-card 100 x 160 mm, DIN 41494
Front panel dimensions		
Height		3 HE
Width soldering side		3 TE
Width component side		5 TE (1 TE = 5,08 mm)
Permissible ambient temperature	T	0° to 45° C (temperature of output stages is monitored)
Weight	m	0.4 kg

## Technical data (for applications outside these parameters, please consult us!)

### Basic settings of potentiometers


Item	Comp. names	Description (lettering on printed-circuit board)	Setting	Front panel designation
1	P1	$n_{\max}$ (command value attenuator)	Right-hand limit stop (maximum)	$G_w$
2	P2	$t_{\text{int}}$ (ramp time)	Left-hand limit stop (minimum)	t
3	P3	$n_{\text{offs}}$ (zero point)	Right-hand limit stop (minimum)	$Z_x$
4	P4	$X_p$ (controller adjustment)	Right-hand limit stop	
5	P5	$I_xR$	Left-hand limit stop	
6	P6	$I_A$ (current limitation)	Right-hand limit stop (no current limitation)	

### Jumper settings

The jumpers are firmly pre-set and must not be changed. This information is provided purely for checking purposes.



Jumper	Factory setting	Remark
J1	Open	Not available
J2	Plugged between jumper pins 2 and 3	Differential input activated
J3	Plugged	Controller and output stage enable
J4	Plugged between jumper pins 1 and 2	Position controller activated
J5	Open	Armature voltage regulation deactivated
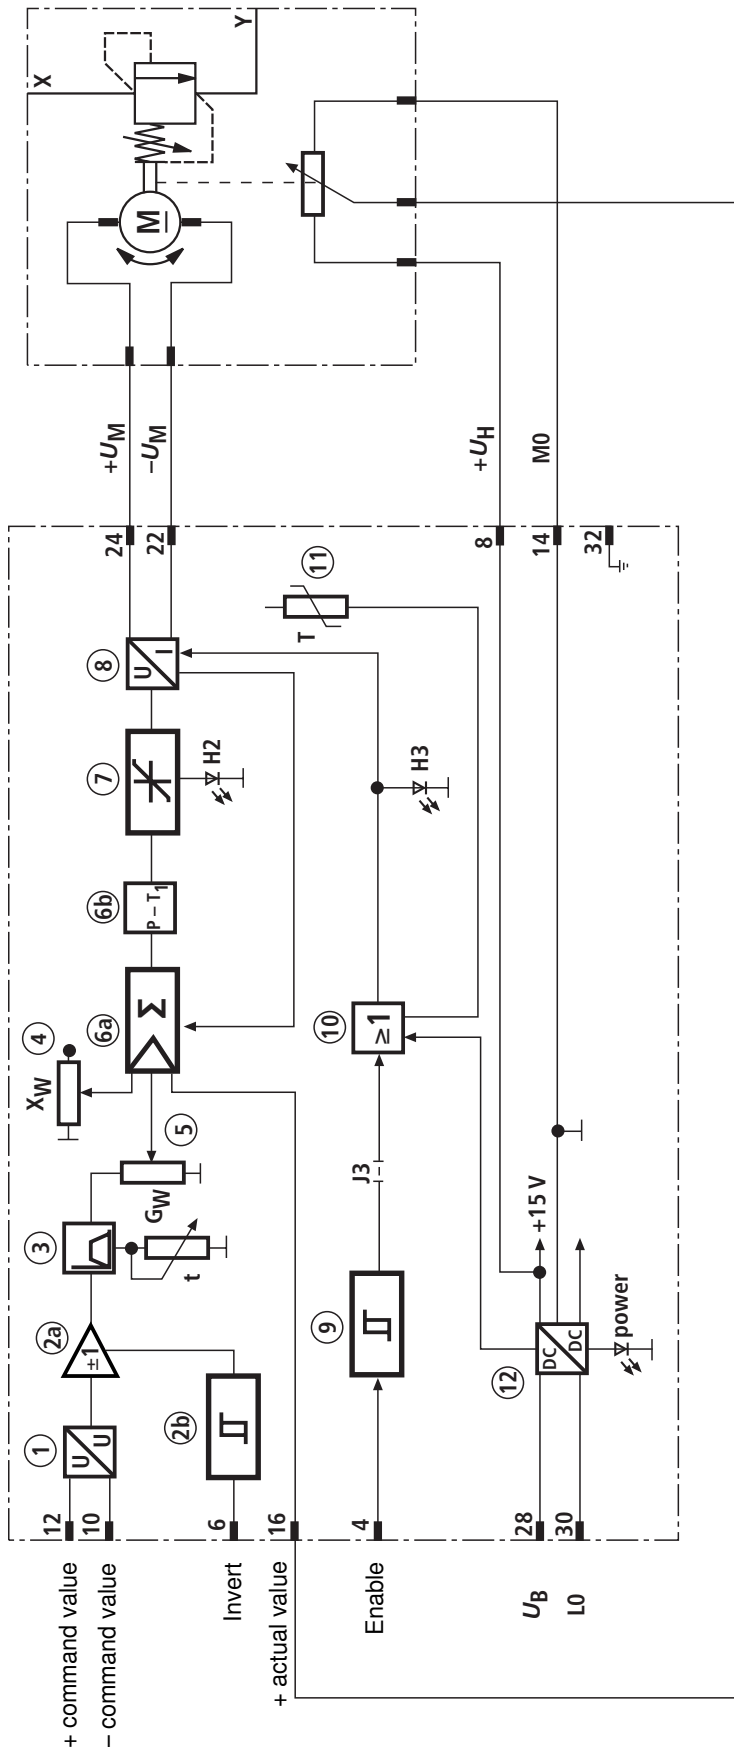
### Block circuit diagram



- |   |  |    |                             |
|---|--|----|-----------------------------|
| 1 | Differential input                               | 9  | Enable input                |
| 2 | Command value inversion                          | 10 | Output stage enable circuit |
| 3 | Ramp generator                                   | 11 | Temperature sensor          |
| 4 | Zero point potentiometer                         | 12 | Internal power supply       |
| 5 | Command value attenuator                         |    |                             |
| 6 | Rotary angle controller                          |    |                             |
| 7 | Maximum current limitation                       |    |                             |
| 8 | Clocked and regulated motor current output stage |    |                             |

## Electrical connection

Connector pinout of amplifier card			Connector pinout of valve	
Pin	Designation	Value	DBG...1X	DRG...1X
4	Enable	OFF	$0\text{ V} < U < 3\text{ V}$	
		ON	$10\text{ V} < U < 30\text{ V}$	
6	Invert	OFF	$0\text{ V} < U < 3\text{ V}$	
		ON	$10\text{ V} < U < 30\text{ V}$	
8	+15 V		3	3
10	-command value	Reference potential		
12	+command value	$0\text{ V} < U < 10\text{ V}$		
14	M0/0 V		1	1
16	+actual value		2	2
18	$I_{Mmax}$	n.c.		
20		n.c.		
22	$-U_{Motor}$		5	5
24	$+U_{Motor}$		6	6
26		n.c.		
28	$+U_B$	24 VDC		
30	L0/ground	0 V		
32	GND	GND/ground		

## Installation and connection

- Connection according to block circuit diagram and table above  
Incorrect connection (polarity reversal) can destroy the device !
- Shield command value, control and actual value cables / connect shield on one end - only to Pin 14
- Shield motor cable / connect shield on one end to system ground and to Pin 32
- Connect L0 on power supply unit to system ground

## Notes

---

Bosch Rexroth AG  
Hydraulics  
Zum Eisengießer 1  
97816 Lohr am Main, Germany  
Phone +49 (0) 93 52 / 18-0  
Fax +49 (0) 93 52 / 18-23 58  
documentation@boschrexroth.de  
www.boschrexroth.de

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent. The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

## Notes

---

Bosch Rexroth AG  
Hydraulics  
Zum Eisengießer 1  
97816 Lohr am Main, Germany  
Phone +49 (0) 93 52 / 18-0  
Fax +49 (0) 93 52 / 18-23 58  
documentation@boschrexroth.de  
www.boschrexroth.de

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent. The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.

## Notes

---

Bosch Rexroth AG  
Hydraulics  
Zum Eisengießer 1  
97816 Lohr am Main, Germany  
Phone +49 (0) 93 52 / 18-0  
Fax +49 (0) 93 52 / 18-23 58  
documentation@boschrexroth.de  
www.boschrexroth.de

© This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent. The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification. It must be remembered that our products are subject to a natural process of wear and aging.