

Explosion-proof Hägglunds DUE

Drive unit, ATEX



Operating instructions
RE 15420-X-B0 /10.2015

Supersedes
RE 15420-X-B0
/05.2015
English



What you need to know about these Operating Instructions

These operating instructions apply to Rexroth explosion-proof hydraulic products and consist

of the following three parts:

Part I General Information RE 15417-X-B1

Part II Installation & Maintenance DUE RE 15325-WA

Part III ATEX Appendix Installation & Maintenance manual RE 15420-X-B2

Bosch Rexroth Mellansel AB

SE-895 80 Mellansel

Sweden

Tel. +46 (0) 660 870 00

Fax +46 (0) 660 871 60

documentation.mll@boschrexroth.se

www.boschrexroth.com/hagglunds

Your local contact can be found at:

www.boschrexroth.com/adresses